



**NOTES:**

1. AIR RELIEF VALVE MAY CONNECT DIRECTLY TO DRIP LINE DEPENDING ON LOCATION OF SYSTEM HIGH POINT. REVIEW WITH UNIVERSITY'S REP. PRIOR TO INSTALLATION.
2. WHEN CONNECTING DIRECTLY TO DRIP LINE USE BLANK TUBING, BARB X FPT CONNECTOR, AND APPROPRIATE FITTINGS PER MANUFACTURERS RECOMMENDATION.